



Ax1

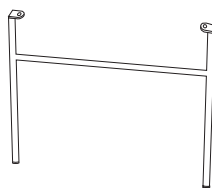

Bx1

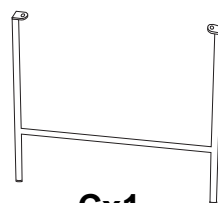


Cx1



Dx4




 Ex4




Fx1


Install all the relevant screws, but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

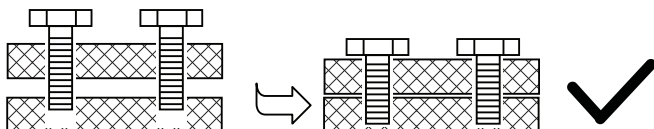

 Don't tighten up the screw before you start next mounting during the installation.



1

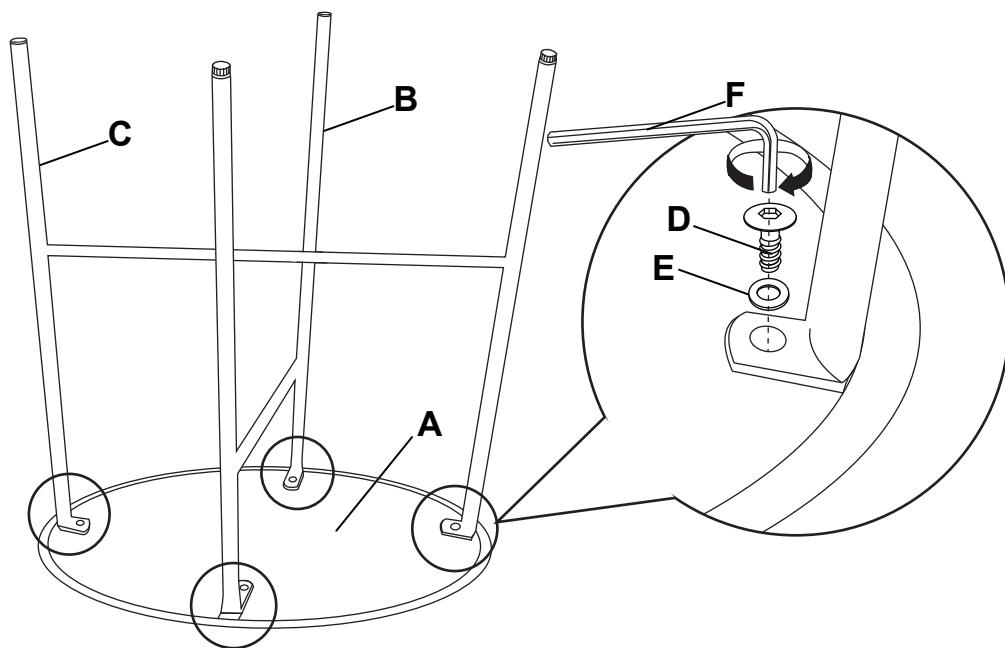

2

